



Huawei ascend G700 Touchscreen Display Replacement

A guide to replace the touchscreen display and frame assembly of a Huawei ascend G700.

Written By: Smilzo



INTRODUCTION

An outline to teach others what they are about to do.

Step 1 — Touchscreen Display



- Remove the back cover and battery

Step 2




- Remove the indicated screws

Step 3



- unhook Central frame using a thin tool behind joints along the entire perimeter of the phone

Step 4

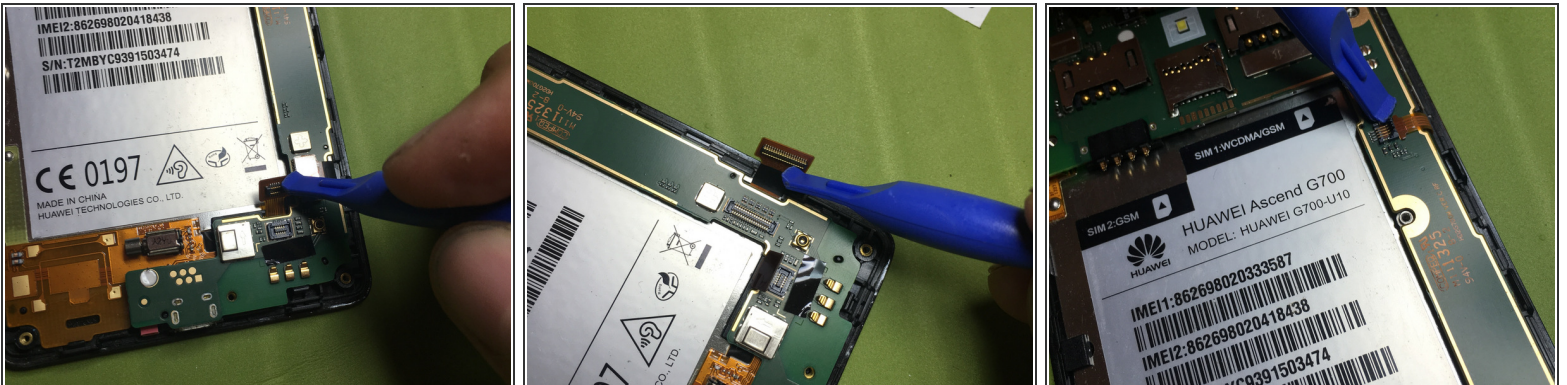


- Unplug the touchscreen connector.
- Unplug the motherboard connector.
- Unplug the side volume key connector.

Step 5



- Unplug the display connector.
- Unplug the camera connector.

Step 6

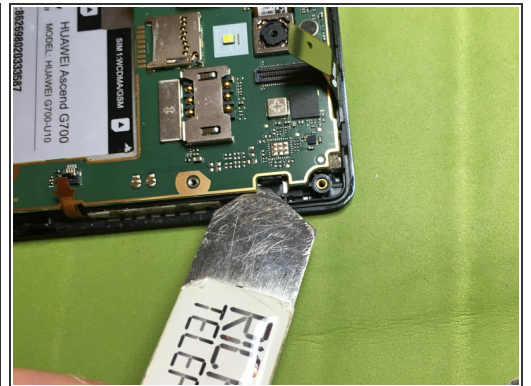

- Unplug the motherboard.

Step 7




- Remove the camera with a heat source because it's glued to the bottom.
- Remove the motherboard from the main body of the phone.
- Remove the power button using a heat source.
- Remove the volume key using a heat source.

Step 8



- Remove the speaker cover.
- Using a heat source, delicately remove the daughterboard.

Step 9

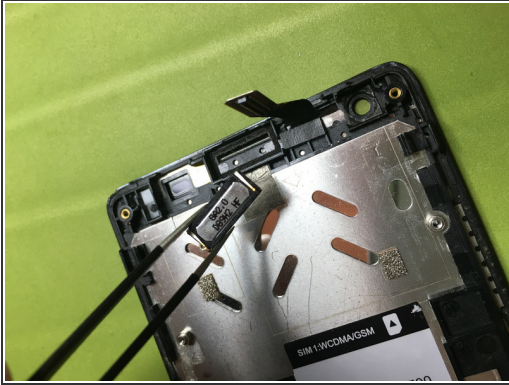

- Remove the speaker using a heat source.
- Remove the technical adhesive strips using a heat source.

To reassemble the device, follow this instructions in reverse order.

This document was last generated on 2017-08-29 03:33:49 PM.